

Model/Modelo: PHSM4007

**PREMIUM
LEVELLA.**

**2-IN-1 STAND & HAND MIXER
BATIDORA DE PEDESTAL Y MANO 2 EN 1**



www.premiumlevela.com

110V 60Hz 400W




USER MANUAL / MANUAL DE INSTRUCCIONES

Use and care manual. Important safeguards. This product is for domestic use only.

Manual de uso y cuidado. Precauciones importantes. Este producto es para uso doméstico únicamente.

Description:

- 1.Body
- 2.Speed switcher
- 3.Eject button
- 4.Attachments for whipping
- 5.Attachments for kneading dough
- 6.Mixer release button
- 7.Stand
- 8.Removable stainless steel bowl

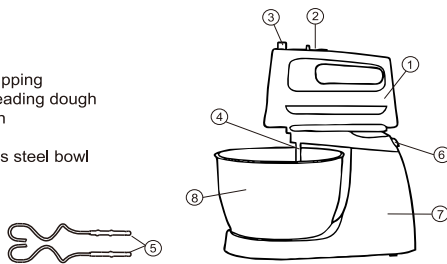

Safety measures

- Read the instruction carefully to avoid breakdowns of appliance and save it for future reference.
- Before first use, make sure voltage of appliance is in accordance with current voltage.
- For household usage only.
- Do not immerse body, cord in water or other liquids. If this happened, apply to authorized service center to check safety.
- Do not use appliance if cord, plug are damaged. For checking and repairing apply to authorized service center. Do not make attempts to repair appliance by yourself.
- Make sure, power cord does not contact hot or sharp surfaces.
- While unplugging pull the plug, not power cord.
- Do not leave working appliance without supervision.
- Keep away from children.
- To avoid electric shock and breakdowns, use accessories which are in the kit.
- Do not overload motor.
- Do not try to make reparations on your own. Apply to authorized service center.
- Do not contact whisks and other moving parts when they are operating.
- Do not whip hard products like frozen food. Motor can burn out.
- Before plug in, make sure speed switcher is in "OFF" position.
- After use, switch off the mixer and then unplug it.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Speed	Operation
1	Dry ingredients mixing
2	Sauces, toppings, puree
3	Kneading of dough for bakery
4	Sugar and butter mixing
5	Cream whisking, beat up of egg-yolk and white of the egg

Use

- Before first use, wash the appliance (Look "clean and care")
- Fix attachments in holes of body.
- Plug in the appliance.
- Choose proper speed.
- After operating, set the speed switcher in "OFF" position. Before taking the whisks out, make sure they do not rotate and appliance is unplugged.
- Attention! Choose the speed according to product type. When mixing, change the speed from slower to faster.
- To avoid motor overheating, time of non stop working must be no more than 10 minutes. Make a 10 minutes brake after each use.
- Unplug the appliance after use.

Clean and care

- Before cleaning, make sure appliance is unplugged.
- Clean the attachments in warm water with detergent. Let them dry.
- Do not use dishwasher.
- Do not immerse body in water or other liquids, for its cleaning use damp soft cloth.
- Do not use abrasive materials for cleaning.
- To disconnect the attachments move speed switcher (2) in "OFF" position and press eject button (3).

Technical parameters:

Power:400W
Voltage:110V 60Hz